





# TOWEL WARMER POWER SWITCH REPLACEMENT

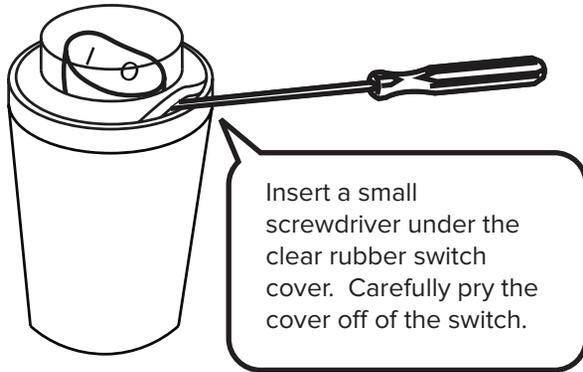


Insert a small screwdriver under the clear rubber switch cover. Carefully pry the cover off of the switch.




Once the cover has been removed, there will be access to the black, plastic trim ring surrounding the red toggle switch.

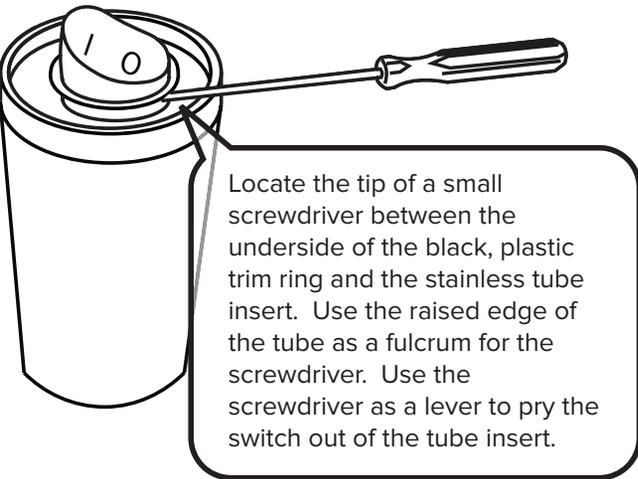


Locate the tip of a small screwdriver between the underside of the black, plastic trim ring and the stainless tube insert. Use the raised edge of the tube as a fulcrum for the screwdriver. Use the screwdriver as a lever to pry the switch out of the tube insert.

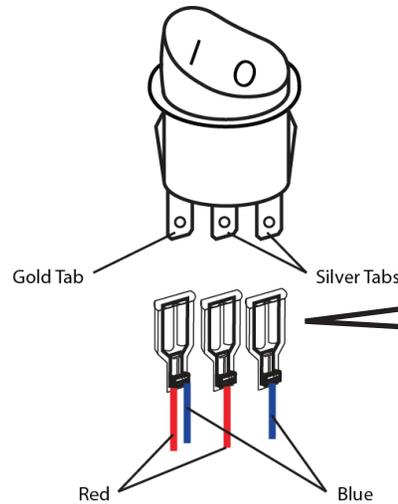

The push-on terminal with the two wires attached to it is attached to the gold tab of the switch. The red push-on terminal gets attached to one silver tab and the blue terminal attaches to the last silver tab. There is no polarity with these 2 connections.

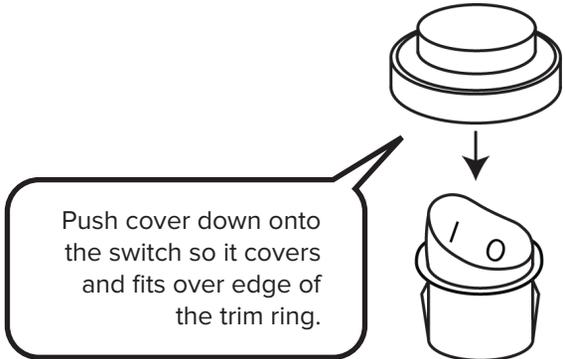

Push cover down onto the switch so it covers and fits over edge of the trim ring.

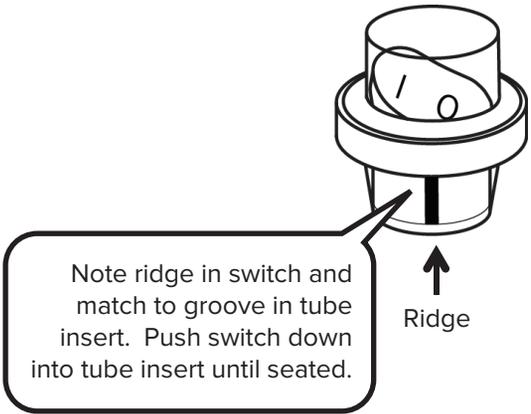

Note ridge in switch and match to groove in tube insert. Push switch down into tube insert until seated.