

WIRING DIAGRAM

For 120V & 240V Twin Conductor TempZone with SmartStat[™] / EasyStat[™]



