

## Flir E Series Thermal Camera **Quick Start Guide**


- 1. Push the On/off button to turn on the camera.
- 2. Open the lens cap by pushing the lens cap lever.
- 3. Aim the camera toward your target of interest.
- 4. Pull the trigger to save an image.

## General

When you save an image, it is stored in the internal camera memory. To display the image again, you can recall it from the internal camera memory.

## Procedure

- 1. Push the Archive button.
- 2. Push the navigation pad left/right or up/down to select the image you want to view.
- 3. Push the center of the navigation pad. This displays the selected image.
- 4. To return to live mode, push the Cancel button repeatedly or push the Archive button.

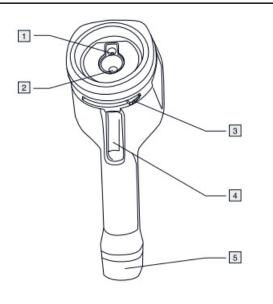

- 1. Digital camera lens
- 2. Infrared lens
- 3. Lever to open and close the lens cap
- 4. Trigger to save images
- 5. Battery

