



**1. Set the Time and Day**

- i. Press the **UP** (▲) or **DOWN** (▼) button to select the correct time.  
Press **OK** button (✓).
- ii. Press the **UP** (▲) or **DOWN** (▼) button to select the correct day.  
Press **OK** button (✓).
- iii. Press the **UP** (▲) button to select time and temperature scale.  
Press **OK** button (✓).

To adjust the Time and Day at a later time (e.g. daylight savings), insert a pin into the (⌚) button. The “R” button will return the thermostat to the factory default settings.


**2. Program the Time and Temperature Settings**

Unless you want to leave your thermostat on the same temperature 24/7, you will need to set-up warming periods. You may program up to four periods per day.

As a default, this thermostat is set to perform two warming periods Monday – Friday, and one warming period Saturday & Sunday. *This default may be changed by following the steps in the Advanced Settings section of your user guide.*

- 1. Press **OK** button (✓) for 3 seconds to begin programming. Days 1,2,3,4&5 (Mon-Fri) will be displayed with the **MORNING** icon (☀).
- 2. Press the **UP** (▲) or **DOWN** (▼) buttons to select the **START** time of the first warming period (⚙).
- Press **OK** button (✓).
- 3. Press the **UP** (▲) or **DOWN** (▼) buttons to select the desired temperature for the first warming period.  
Press **OK** button (✓).

- 4. Press the **UP** (▲) or **DOWN** (▼) buttons to select the **END** time of the first warming period (🏠➡).
- Press **OK** button (✓).
- 5. Press the **UP** (▲) or **DOWN** (▼) buttons to select the desired temperature for the time between the first and second warming periods (🏠➡).  
Press **OK** button (✓).
- 6. Press the **UP** (▲) or **DOWN** (▼) buttons to select the **START** time of the second warming period (🏠➡).
- Press **OK** button (✓).
- 7. Press the **UP** (▲) or **DOWN** (▼) buttons to select the desired temperature for the second warming period (🏠➡).  
Press **OK** button (✓).
- 8. Press the **UP** (▲) or **DOWN** (▼) buttons to select the **END** time of the second warming period (☾).
- Press **OK** button (✓).
- 9. Press the **UP** (▲) or **DOWN** (▼) buttons to select the desired temperature for the time after the second warming period (☾).  
Press **OK** button (✓).

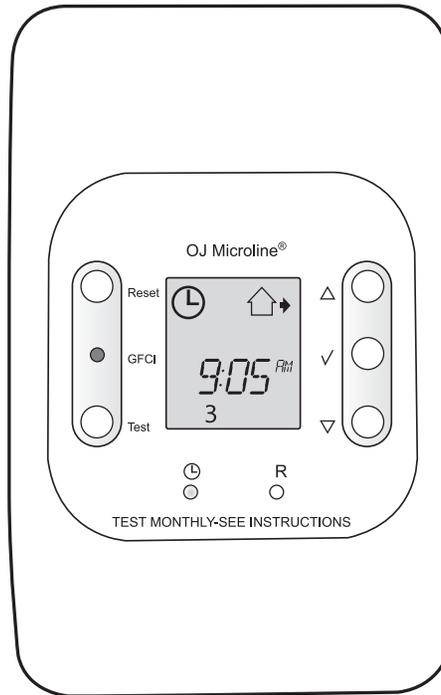

Monday through Friday is now programmed and days 6 & 7 (Sat-Sun) will be displayed with the **MORNING** icon (☀).

- 10. Press the **UP** (▲) or **DOWN** (▼) buttons to select the **START** time of the warming period (⚙) (typically first thing in the morning).  
Press **OK** button (✓).
- 11. Press the **UP** (▲) or **DOWN** (▼) buttons to select the desired temperature for the time after the warming period (☾) (typically at the end of the evening).  
Press **OK** button (✓).

