
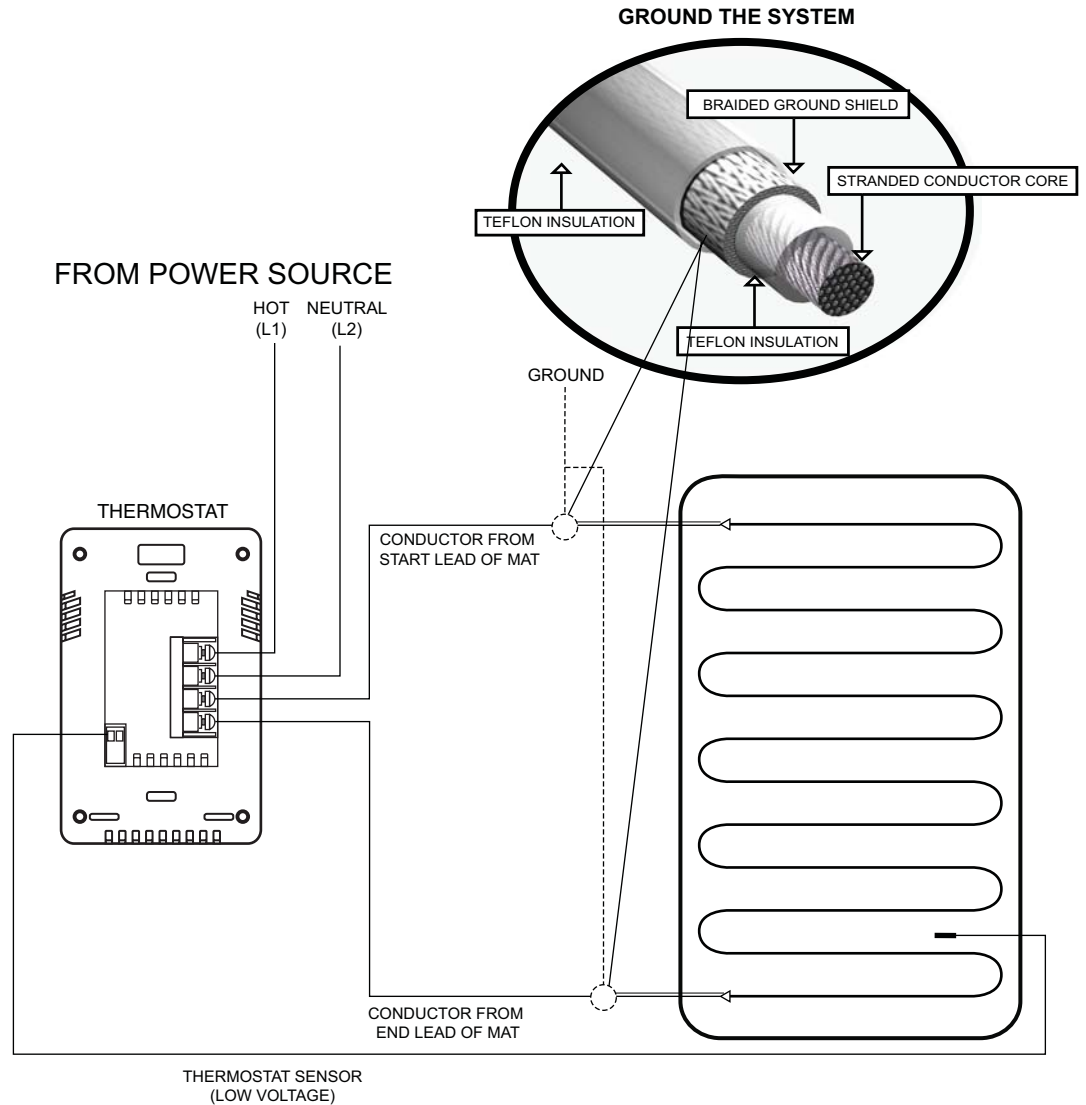
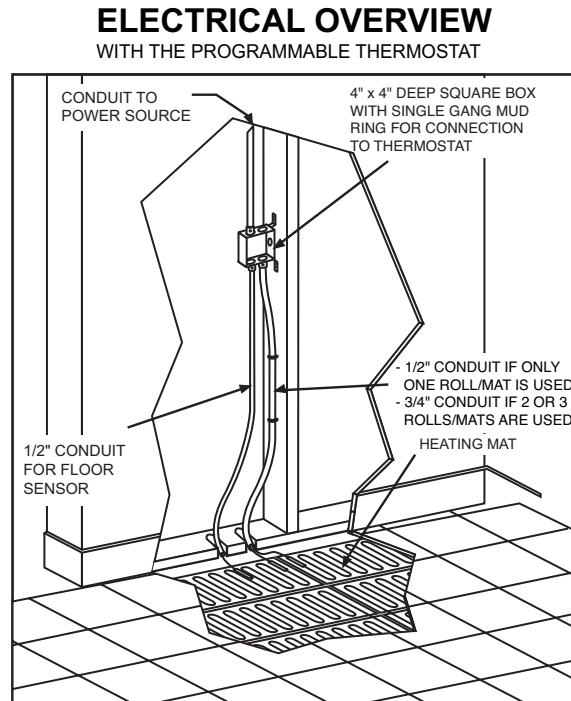


# OJ THERMOSTAT WIRING DIAGRAM

FOR ELECTRICIAN

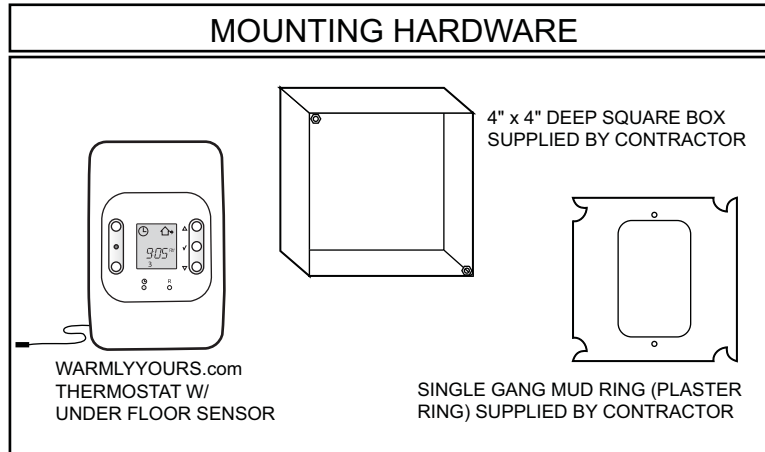

**DON'T FORGET TO GROUND THE SYSTEM**