


1200 VA TRANSFORMER WIRING TO 3 LOW VOLTAGE ROLLS

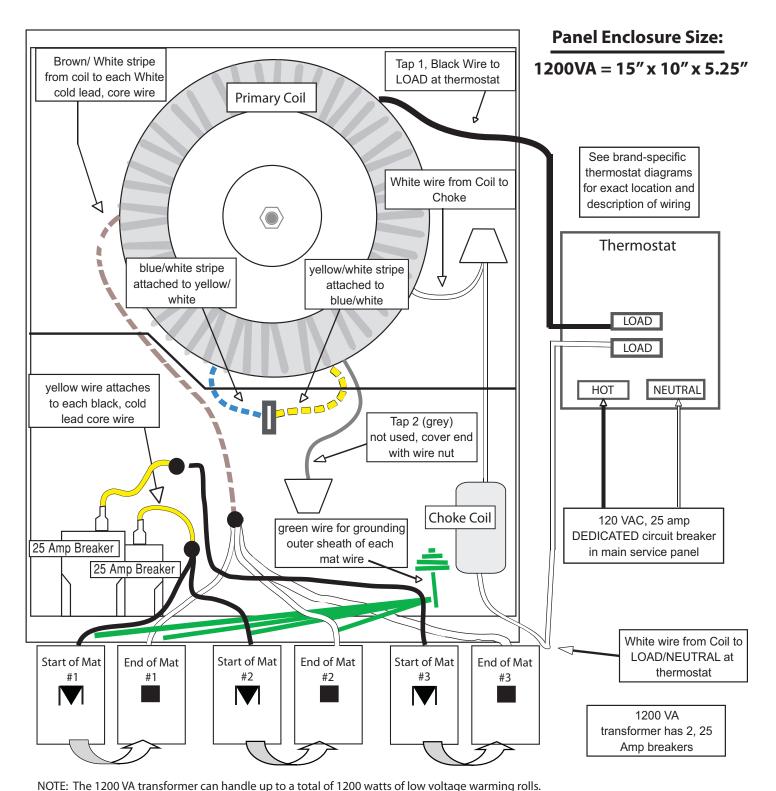

If the total watts requirements of all the rolls exceeds 1200 watts, a larger capacity transformer will be needed.

To avoid nuisance GFCI tripping, please use plenty of electrical tape to prevent arcing between the conductors and their respective braids/shields.