



**TOOLS REQUIRED**

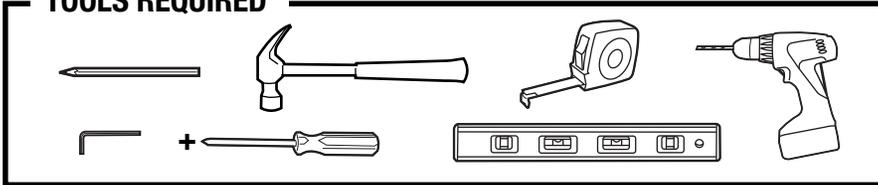


**ACCESSORIES**

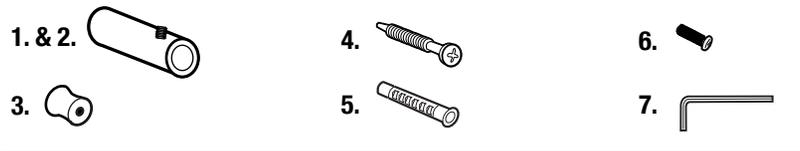


- (1) + (2) Round Wall hang bracket + set screw
- (3) 3pc Bushings and 1pc short tube for wall bracket
- (4) Long screw
- (5) Plastic wall anchor
- (6) Short screw
- (7) Hex Key Wrench


**INSTALLATION**

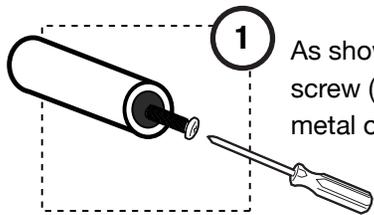


**1** As shown in the picture, push the short screw (6) through the hole in the sheet metal of the bracket (1)

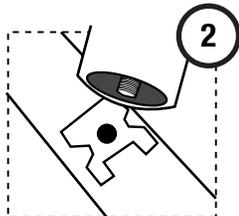


**2** Use the short screw (6) to attach the bracket onto the metal pad located on the rear of the vertical tube.

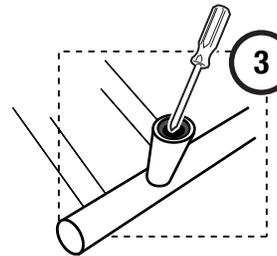


**3** Tighten the short screw (6) with a screwdriver. Note that the hole of the bracket (1) should face downward towards the floor when the towel rail is mounted to the wall.

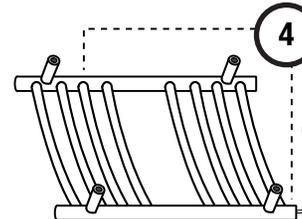


**4** Attach the three remaining brackets (1) to the vertical tubes by repeating steps 1 through 3.

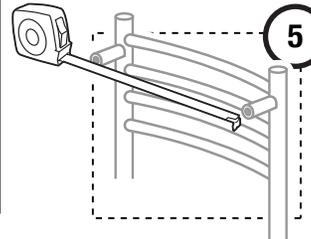

**5** Use a tape measure to measure the distance between these four mounting holes. Use the tape measure to get the distances of A-B, A-C, C-D, B-D, A-D, and B-C.

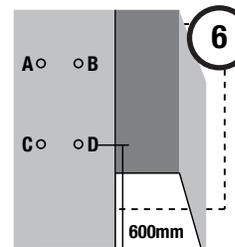


**6** Use a pencil to mark locations A, B, C, D on the wall according to the measurements. We suggest mounting the Towel Warmer at least 24" (600mm) above the floor. We suggest mounting the left rail of the towel warmer to a stud, if possible.

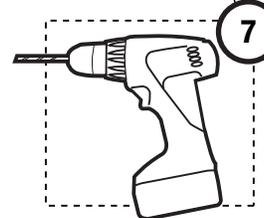


**7** Use a drill with an appropriately sized drill bit to make the holes for A, B, C, and D. If mounting to a stud, only drill holes B & D.

**TOOLS REQUIRED**

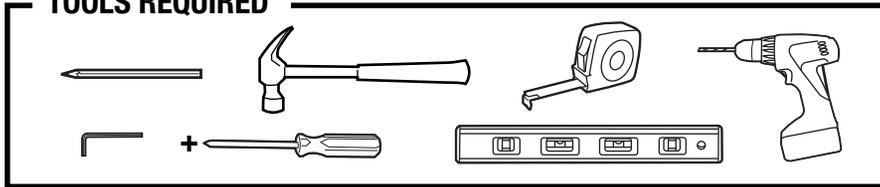

**ACCESSORIES**

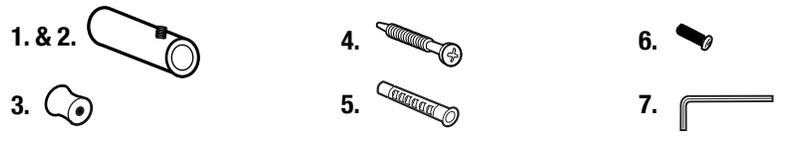

- (1) + (2) Round Wall hang bracket + set screw
- (3) 3pc Bushings and 1pc short tube for wall bracket
- (4) Long screw
- (5) Plastic wall anchor
- (6) Short screw
- (7) Hex Key Wrench

**INSTALLATION**

