



# Step-by-Step Installation Guide: TempZone Flex Roll Under Nailed Hardwood Flooring

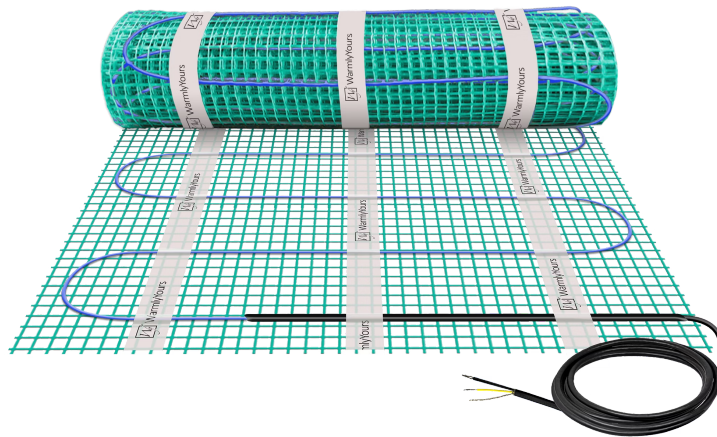

A step-by-step guide to properly installing the WarmlyYours TempZone Flex Roll electric radiant heating system beneath hardwood flooring using the wood sleeper method.



---

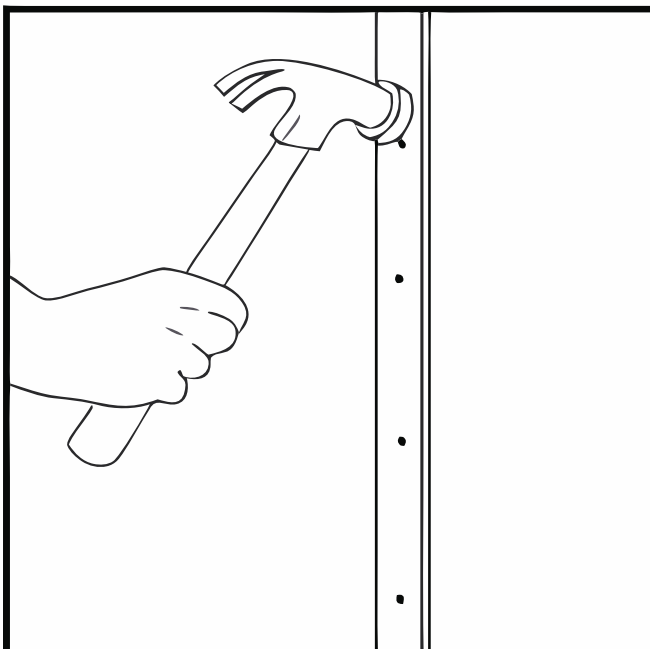


## Step 1: Install Wood Sleepers

Install wood sleepers (strips of wood 1" to 2" wide and 3/8" to 1/2" high) at nail spacing requirements specified by the manufacturer. The sleepers are installed to create lanes into which the warming system will be placed. The flooring should be installed as per the flooring manufacturer's requirements. Verify with the manufacturer that the flooring has been approved for this use. Supply WarmlyYours with nail spacing parameters and the Smartplan will be drawn accordingly.

## STEP 2: Lay The Heating System

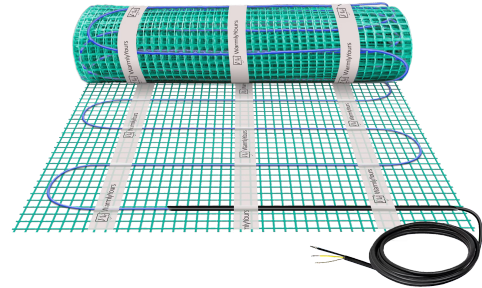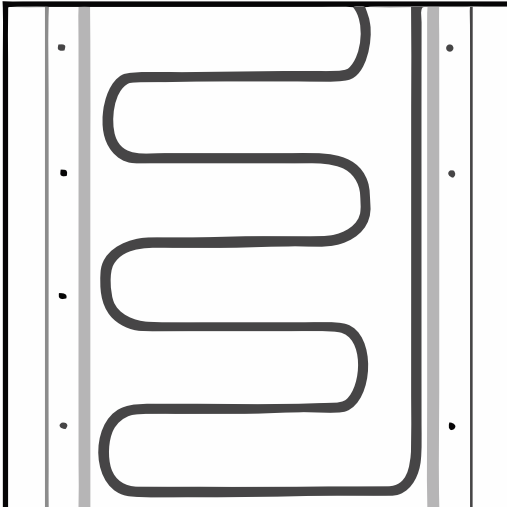


Cut and turn the rolls to fit into the lanes created by the sleepers. This method works best when sleeper spacing is 18" or more, since the mat itself is 18" wide; for tighter sleeper spacing, use [TempZone Cable](#).

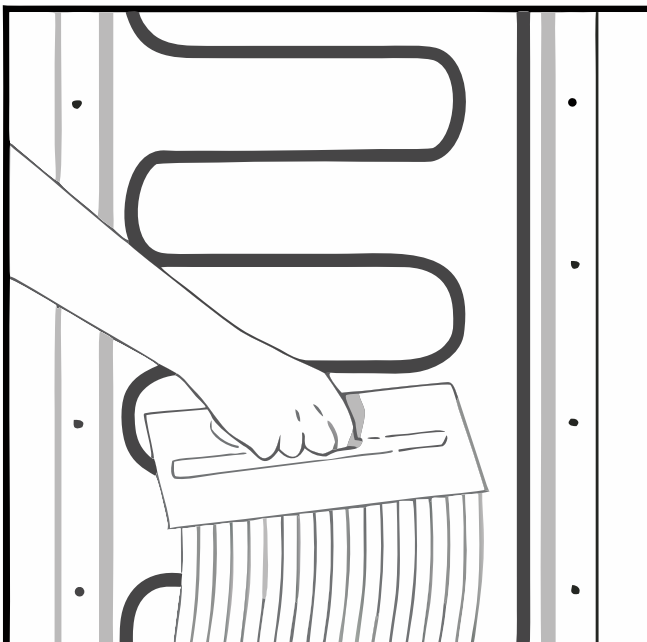

## STEP 3: Cover Rolls With Self Leveling Cement

Once the system is in place, the warming roll should be covered with self leveling cement up to and even with the top of the wood sleepers.

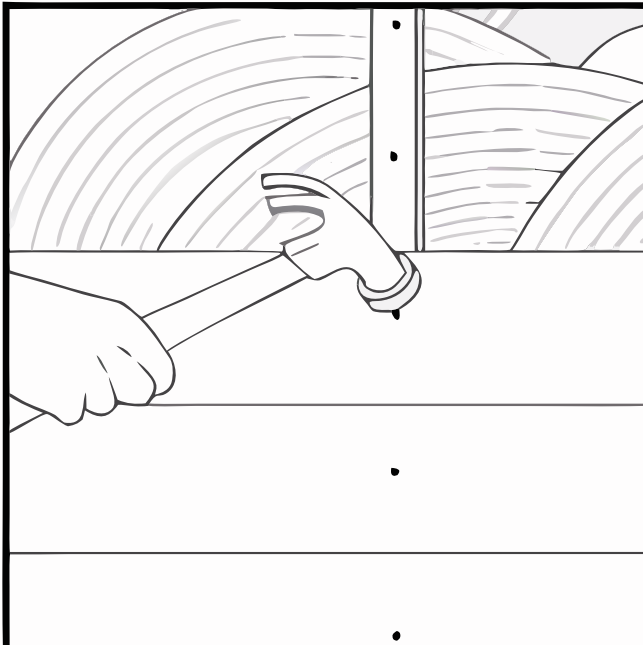

## STEP 4: Install Hardwood Flooring

Once the self leveling cement has dried and cured to the manufacturer's specifications the hardwood floor can be installed by nailing it into the wood sleepers. Be careful not to place nails or staples near the heating cable or power leads.

---

## We're Here to Help

Have questions about your installation? Our experts are ready to assist.



### Reach Out to Us

**Phone: 800-875-5285**

Our dedicated support team is available to answer all your questions.



### Your Trusted Partner

From planning to installation, WarmlyYours is with you every step of the way.