




PROGRAMMING GUIDE


Decide which mode is best for your application:

Standard mode **Std**

To exit programming at any time press override button - 





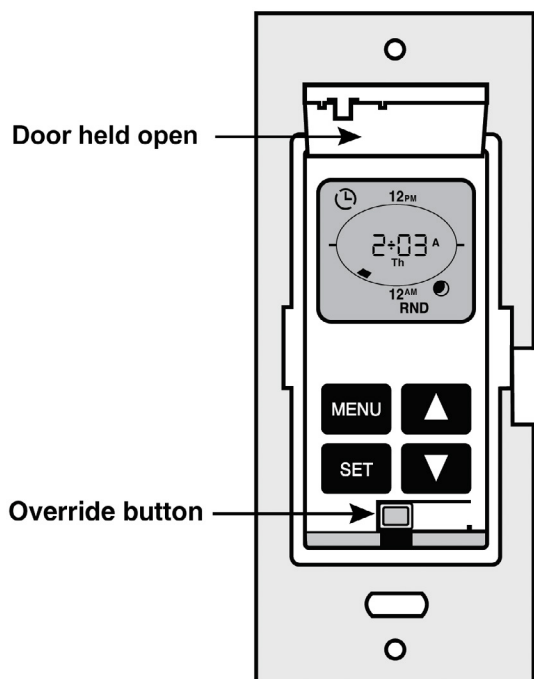



To program your device:

- Perform a **System Reset** by gently lifting the VPT24 door from the bottom of the push pad until an audible click is heard. The door will stay open while you are programming the device:
- Press and hold **SET** followed by  (**Override**) until **DEL** stops flashing and **Std** flashes (approximately 5 seconds). Press **SET** to confirm device **Reset**.
- Product will go through a brief self test and then **MODE** will begin to flash. Choose **Prm** or **Std** by using  or  until the selected mode appears and pressing **SET** to confirm your choice.
- Continue to the programming section for the Mode chosen.













PROGRAMMING STANDARD MODE

To set the clock:

- 12:** will be flashing. Use  or  to choose the hours. Press **SET** to confirm your choice.
- The minutes will be flashing. Use  or  to choose the minutes. Press **SET** to confirm your choice.
- A** for **AM** or **P** for **PM** will be flashing. Use  or  to choose the **A** or **P**. Press **SET** to confirm your choice.
- The day of the week will be flashing. Use  or  to choose the day. Press **SET** to confirm your choice.

To set ON/OFF Events:

- Press **MENU** until **PRG** is in the lower left corner. Press **SET** to enter the programming mode.
- Event 1** will be flashing. Press **SET** to choose this event or use  to move to the next event and press **SET** to confirm your event number choice.
- All days of the week will be flashing. Press **SET** to choose all days of the week or use  or  to scroll through **M-F** and **Sa-Su**. Press **SET** to confirm your days of the week choice and continue to program the event **ON TIME**.
- At **---** use  or  to choose **---** for time, or **DEL** to delete an existing program and press **SET** to confirm your choice.
- Use  or  to choose the hour and press **SET** to confirm your choice. Do the same for minutes and press **SET** to confirm your choice. Continue to program the event **OFF TIME**.
- At **6:00P** press **SET** to choose the **OFF TIME** or use  or  to choose **DEL** to delete an existing program and press **SET** to confirm your choice.
- Continue to set desired events in the same manner. When you are done press  to escape out of programming. If no buttons are pressed after approximately 30 seconds the device will automatically exit out of programming mode.

TIMER OVERRIDES

- Activate Temporary Override by pressing the push pad to toggle the load (ON to OFF or OFF to ON).
- Activate Permanent Override by pressing and holding the push pad for several seconds to maintain the load in the current state (either ON or OFF).